



BERT

1100 SERIES NRZ AND PAM4 BERT/PPG

PRELIMINARY SPECIFICATION SHEET

AVAILABLE IN PXI


AVAILABLE IN MATRIQ

quantifiphotonics.com

FEATURES

Quantifi Photonics' BERT-1102 is an 8-channel PPG and Error Detector for the design, characterization and manufacturing test of optical transceivers and opto-electrical components with symbol rates up to 29 GBaud/s in both NRZ and PAM4 formats.

With scalability and exceptional signal fidelity, it is a cost-effective test solution for up to 400 Gb/s communication eco-systems.



Programmable deemphasis and CTLE processor


Programmable 7-tap PPG Tx de-emphasis and error detector receiver continuous-time linear equalizer (CTLE) allow the user to compensate for finite coaxial cable interconnect loss.

Single platform testing

Conduct all your DUT characterization on one platform (optical and electrical testing can be integrated in PXIe) and spend less time switching cables and patchcords between instruments.

Built-in clock recovery

Each error detect channel has its own independent, simultaneous, clock-and-data recovery (CDR); this makes BERT testing a versatile and easy-to-use instrument. There is no need for additional clock recovery hardware.



Simple control with intuitive GUI

Save time and reduce complexity with the easy-to-use cohesionUl GUI. Control all channels and functions from its single panel interface (including all other Quantifi Photonics modules in the system from the same intuitive interface).

Internal clock synthesizer

An integrated clock synthesizer is provided internally as part of the PPG for additional convenience and hassle-free operation. No external clock generator is required.

Extremely high channel density in PXI


With 8-channels per two-slot PXIe module, fit up to 64 synchronized 29 GBaud channels (with either NRZ or PAM4 per channel) per single PXIe mainframe.

TARGET APPLICATIONS


- Multi-channel BER Tester for optical or electrical transceivers running up to 29GBaud per channel
- Active optical cable testing
- High speed SerDes, clock-data-recovery, and laser-driver testing and characterization
- General purpose 29GBaud Pulse Pattern Generator (NRZ and PAM4)
- Automated testing for manufacturing, utilizing PXIe platform's extensive support modules for all other types of optical and electrical testing in a single PXIe platform

EXAMPLE DATA SIGNALS

Example of one channel 28 Gbaud (56 Gbps) PAM4 PRBS data signal generated by the BERT-1102 PPG

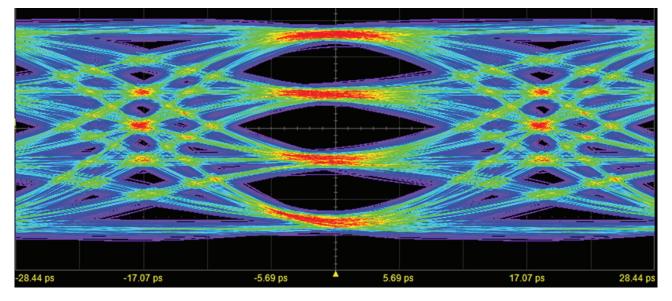

Example of one channel 28 Gbps NRZ PRBS data signal generated by the BERT-1102 PPG

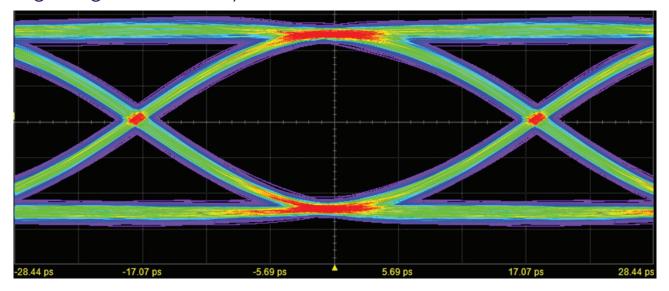


Simple, Intuitive Control with COHESIONUI™

CohesionUI makes it simple to control our PXI or MATRIQ instruments from a PC, tablet or smartphone. Its cutting-edge design offers a sleek modern interface, cross device compatibility, customizable views and remote network access.


PPG output level control

The OUTPUT menu in the CohesionUI GUI for the BERT 1100 Series allows the user to set the PPG's electrical output amplitudes for either NRZ or PAM4 type signals. The user can independently modify the total peak-peak amplitudes of either the NRZ (two levels) or PAM4 (four levels) outputs. In addition to being able to modify the relative levels in the NRZ and PAM4 signals, each channel can be set independently at different levels from each other, including independent channel enable-disable toggling.

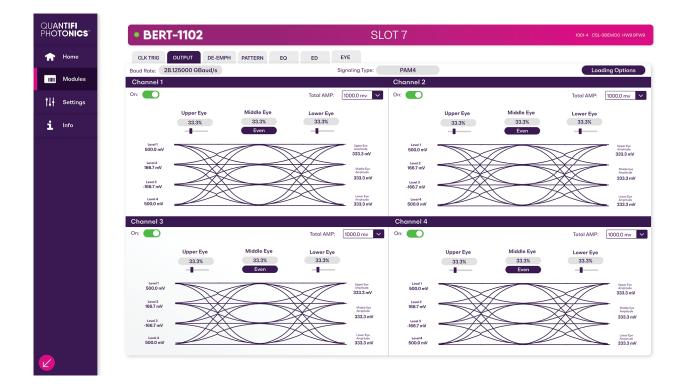


PPG de-emphasis 7-tap control

The BERT 1100 Series PPG outputs can be adjusted with a 7-tap emphasis control. The user can independently set both pre-cursor and post-cursor emphasis on the PPG electrical outputs in order to compensate for inter-symbol interference in the transmission medium as well as finite cable losses. It is possible to engage both pre- and post-cursor de-emphasis simultaneously.

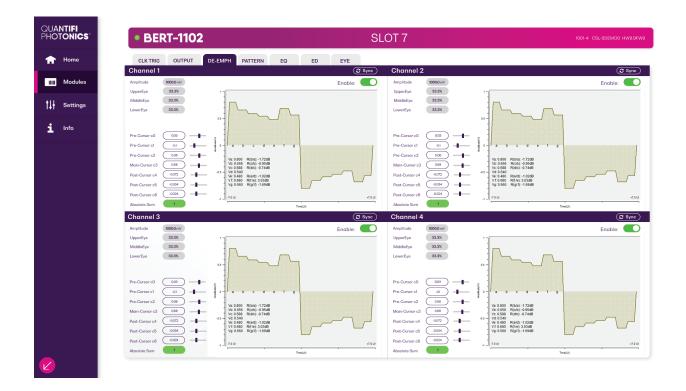

Error detect equalization and BER bathtub and eye histogram menu

Each of the Error Detect (ED) input channels is equipped with a continuous-time linear equalizer (CTLE) with user adjustable boost values from 0dB to 12dB relative to the 14GHz gain of the receiver. In addition to being able to adjust the receiver's CTLE equalizations, the user can perform a histogram scan independently for each receiver ED channel. These histograms provide immediate feedback to the user as to how balanced and effective the receive equalization is for optimizing the error rate performance.

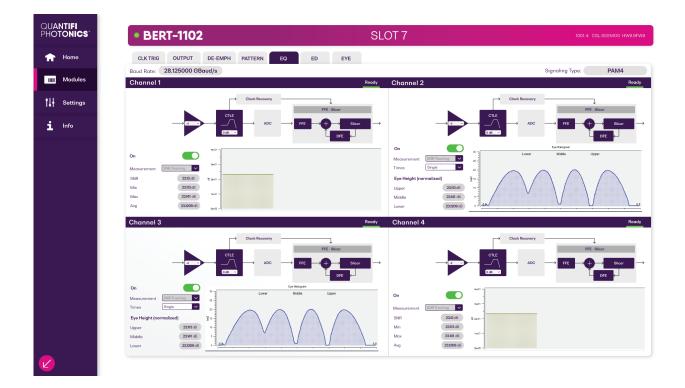

3D BER eye contour measurement menu

An eye scan feature is provided on each of the receiver channels. These provide a colorcontoured graphical result indicating how each channel is affected by either horizontal phase or vertical amplitude adjustments on the channel's decision thresholds (commonly referred to as "slicer" levels). The instrument will automatically scan the entire unit interval (bit period) both in phase alignment and vertical decision voltage and present the color coded error rate in a 2D plot for those offsets in the graphical result.

These eye patterns are similar to what traditional time-domain oscilloscopes with an optical converter on their input would see for an eye-pattern test, but are performed rapidly by utilizing all the BER measurements results for every measured bit and do not require the trigger-and-sample approach used by an oscilloscope.



PXIe - MODULAR

Our expanding range of PXIe optical test solutions are used by customers in mixed-signal test and measurement systems, reducing complexity, lowering the cost of test and accelerating time to market.

- Multi vendor, open standard with over 2500 PXI modules available
- Advanced timing and synchronization capabilities across instruments
- Low latency, high performance processing and fast data throughput
- Design and build scalable, high channel count systems
- Small footprint and lower power consumption



MATRIQ - COMPACT & PORTABLE

The MATRIQ series provides the same high-performance test capabilities of our PXIe modules in an compact benchtop design. MATRIQ instruments are simple to setup and easy to operate, making them the perfect choice for your optical lab or test bench.

- Same performance and control as our PXIe modules
- Plug and play with USB or Ethernet connectivity
- Control via the web-based GUI, COHESIONUI or SCPI commands
- Compact and portable design saves benchtop space




PRODUCT IMAGES



MATRIQ - COMPACT & PORTABLE



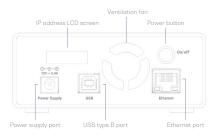



BERT-1102-8-MTRQ

TECHNICAL SPECIFICATIONS

General Specifications	PXI	MATRIQ	
Bus connection	PXIe	USB and Ethernet	
Slot count	2	-	
Dimensions (H x W x D)	130 x 40 x 215 mm 5.1 x 1.6 x 8.5 inches	53 x 120 x 202 mm 2.1 x 4.7 x 8.0 inches	
Weight	~ 1 kg ~ 2.2 lbs	~ 1.1 kg ~ 2.4 lbs	
Operating temperature range	5°C to 45°C 41°F to 113°F	5°C to 45°C 41°F to 113°F	
Storage temperature range	-40°C to 70°C -40°F to 158°F	-40°C to 70°C -40°F to 158°F	

Pulse Pattern Generator	1102	1102	
Number of channels	8	8	
RF output	AC-coupled differential ⁶	AC-coupled differential ⁶	
RF connector	2.92mm breakout cable 7	2.92mm breakout cable ⁷	
Impedance	100 ohms between differential outputs	100 ohms between differential outputs	
Data coding	NRZ and PAM4	NRZ and PAM4	
Data rate (Gbps, NRZ format) ^{1,8}	1.25, 2.5, 3.125, 4.25, 5.1562, 6.25, 7.5, 8.5, 9.83040, 9.95328, 10.13760, 10.3125, 10.709, 10.755, 10.9365, 11.049, 12.16512, 12.5, 14.025, 15, 20.2125, 20.625, 20.9375, 21.875, 24.33024, 25, 25.78125, 26.31453453, 26.5625, 28.125	1.25, 2.5, 3.125, 4.25, 5.1562, 6.25, 7.5, 8.5, 9.83040, 9.95328, 10.13760, 10.3125, 10.709, 10.755, 10.9365, 11.049, 12.16512, 12.5, 14.025, 15, 20.2125, 20.625, 20.9375, 21.875, 24.33024, 25, 25.78125, 26.31453453, 26.5625, 28.125	
Symbol rate (Gbaud, PAM4 format) ²⁸	7.5, 8.5, 9.8304, 9.95328, 10.1376, 10.3125, 10.709, 10.755, 10.9365, 11.049, 12.16512, 12.5, 14.025, 15, 16.25, 16.875, 20.625, 20.9375, 21.25, 21.875, 23.125, 23.28125, 25, 25.78125, 26.31453453, 26.5625, 28.125	7.5, 8.5, 9.8304, 9.95328, 10.1376, 10.3125, 10.709, 10.755, 10.9365, 11.049, 12.16512, 12.5, 14.025, 15, 16.25, 16.875, 20.625, 20.9375, 21.25, 21.875, 23.125, 23.28125, 25, 25.78125, 26.31453453, 26.5625, 28.125	
Data rate (Gbps, PAM4 format) ^{2,8}	15.00, 17.00, 19.6608, 19.90656, 20.2752, 20.6250, 21.4180, 21.51, 21.8730, 22.0980, 24.33024, 25.00, 28.05, 30.00, 32.5, 33.75, 41.25, 41.875, 42.50, 43.75, 46.25, 46.5625, 50.00, 51.5625, 52.62906905, 53.125, 56.250	15.00, 17.00, 19.6608, 19.90656, 20.2752, 20.6250, 21.4180, 21.51, 21.8730, 22.0980, 24.33024, 25.00, 28.05, 30.00, 32.5, 33.75, 41.25, 41.875, 42.50, 43.75, 46.25, 46.5625, 50.00, 51.5625, 52.62906905, 53.125, 56.250	
PRBS and other data patterns	NRZ: PRBS7/9/11/13/15/23/31/58 PAM4: PRBS7Q/9Q/11Q/13Q/15Q/23Q/ 31Q/58Q And inverted patterns, Square Wave, Transmitter test patterns JP03B, SSPRQ, LIN and CJT patterns	NRZ: PRBS7/9/11/13/15/23/31/58 PAM4: PRBS7Q/9Q/11Q/13Q/15Q/23Q/ 31Q/58Q And inverted patterns, Square Wave, Transmitter test patterns JP03B, SSPRQ, LIN and CJT patterns	
Output amplitude (mV differential)	Adjustable 600 to 1000 mV	Adjustable 600 to 1000 mV	
Output amplitude steps (mV differential)	100	100	
Rise/fall time (20% to 80%)	TBD	TBD	
Intrinsic jitter	TBD	TBD	
Crossing point adjustment	None	None	
Programmable de-emphasis	7 tap, programmable pre and post-cursor 7 tap, programmable pre and post-		
Polarity inversion	Yes	Yes	

TECHNICAL SPECIFICATIONS

Error Detector	1102	1102	
Number of channels	8	8	
RF input	AC-coupled differential ⁶	AC-coupled differential ⁶	
Impedance	100 ohms between differential outputs	100 ohms between differential outputs	
Data rate (Gbps, NRZ format) ^{1,8}	1.25, 2.5, 3.125, 4.25, 5.1562, 6.25, 7.5 8.5, 9.83040, 9.95328, 10.13760, 10.3125 10.709, 10.755, 10.9365, 11.049, 12.16512 12.5, 14.025, 15, 20.2125, 20.625 20.9375, 21.875, 24.33024, 25, 25.78125, 26.31453453, 26.5625, 28.125 Gbps	1.25, 2.5, 3.125, 4.25, 5.1562, 6.25, 7.5 8.5, 9.83040, 9.95328, 10.13760, 10.3125 10.709, 10.755, 10.9365, 11.049, 12.16512 12.5, 14.025, 15, 20.2125, 20.625 20.9375, 21.875, 24.33024, 25, 25.78125, 26.31453453, 26.5625, 28.125 Gbps	
Symbol rate	7.5, 8.5, 9.8304, 9.95328, 10.1376, 10.3125, 10.709, 10.755, 10.9365, 11.049, 12.16512, 12.5, 14.025, 15, 16.25, 16.875, 20.625, 20.9375, 21.25, 21.875, 23.125, 23.28125, 25, 25.78125, 26.31453453, 26.5625, 28.125	7.5, 8.5, 9.8304, 9.95328, 10.1376, 10.3125, 10.709, 10.755, 10.9365, 11.049, 12.16512, 12.5, 14.025, 15, 16.25, 16.875, 20.625, 20.9375, 21.25, 21.875, 23.125, 23.28125, 25, 25.78125, 26.31453453, 26.5625, 28.125	
Data rate (Gbps, PAM4 format) ^{1.8}	15.00, 17.00, 19.6608, 19.90656, 20.2752, 20.6250, 21.4180, 21.51, 21.8730, 22.0980, 24.33024, 25.00, 28.05, 30.00, 32.5, 33.75, 41.25, 41.875, 42.50, 43.75, 46.25, 46.5625, 50.00, 51.5625, 52.62906905, 53.125, 56.250	15.00, 17.00, 19.6608, 19.90656, 20.2752, 20.6250, 21.4180, 21.51, 21.8730, 22.0980, 24.33024, 25.00, 28.05, 30.00, 32.5, 33.75, 41.25, 41.875, 42.50, 43.75, 46.25, 46.5625, 50.00, 51.5625, 52.62906905, 53.125, 56.250	
PRBS patterns ¹²	NRZ: PRBS7/9/11/13/15/23/31/58 PAM4: PRBS7Q/9Q/11Q/13Q/15Q/23Q/ 31Q/58Q	NRZ: PRBS7/9/11/13/15/23/31/58 PAM4: PRBS7Q/9Q/11Q/13Q/15Q/23Q/ 31Q/58Q	
Sensitivity ³	100 mV peak-peak differential	100 mV peak-peak differential	
Max operational input	1200 mV peak-peak differential	1200 mV peak-peak differential	
Clock source	Independent CDR on each input channel	Independent CDR on each input channel	
Polarity inversion	Yes	Yes	
Equalizer	Feed forward equalizer with 3 taps pre-cursor, main cursor and 6 taps post-cursors 1 tap PAM4 DFE PM4 1+D decoder filter to cancel 1/(1+D)	Feed forward equalizer with 3 taps pre-cursor, main cursor and 6 taps post-cursors 1 tap PAM4 DFE PM4 1+D decoder filter to cancel 1/(1+D)	
	pattern generator DFE encoder Optional PAM4 reflection canceler to reduce group delay effects PAM4 Level Dependent Equalizer (LEDQ) to equalize the two inner level of the PAM4 eye	pattern generator DFE encoder Optional PAM4 reflection canceler to reduce group delay effects PAM4 Level Dependent Equalizer (LEDQ) to equalize the two inner level of the PAM4 eye	
Eye contours	3D Eye Monitor on each input to allow advanced measurements such as BER contours and eye parameters. Supported for rate > 1.25Gbps.	3D Eye Monitor on each input to allow advanced measurements such as BER contours and eye parameters. Supported for rate > 1.25Gbps.	

TECHNICAL SPECIFICATIONS

Divided Clock Output	1102	1102	
Rfoutput	Single-ended SMA	Single-ended SMA	
Impedance	50 ohms (AC coupled)	50 ohms (AC coupled)	
Frequency	1/2, 1/4, 1/8, or 1/16 of the clock rate	1/2, 1/4, 1/8, or 1/16 of the clock rate	
Intrinsic jitter	TBD	TBD	
Output amplitude	700 mV (typical)	700 mV (typical)	
Selectable clock divider	Divide by 2, 4, 8 or 16 Divide by 2, 4, 8 or 16		

Clock and Data Recovery	1102	1102	
Data rate (NRZ format)	1.25 to 28.125 Gbaud (1.25 Gbps to 29 Gbps)'	1.25 to 28.125 Gbaud (1.25 Gbps to 29 Gbps)'	
Data rate (PAM4 format)	15 to 28.125 Gbaud (30 Gbps to 56.25 Gbps) ²	15 to 28.125 Gbaud (30 Gbps to 56.25 Gbps)²	
Loop bandwidth	TBD (target: FC/1667 default, tunable 1 to 23 MHz)	TBD z) (target: FC/1667 default, tunable 1 to 23 MHz	
CDR output	No	No	


Breakout Cables	1102	1102
Length	30 or 60 cm	30 or 60 cm
Connectors ⁴	2.92 mm, Male	2.92 mm, Male
Skew	< 2 ps skew match	< 2 ps skew match

Notes

- NRZ is selectable for discrete rates, the rate can deviate by +/- 100ppm maximum.
- 2. PAM4 is selectable for discrete rates, the rate can deviate by +/- 100ppm maximum.
- Sensitivity of ED for NRZ is 50mV peak-peak differential; for PAM4 with levels 0, 1, 2, 3, sensitivity is 100mVp-p differential for level 0 to 3.
- 4. The front panel of the BERT uses a compact 1x8 Mini Coax for the PPG outputs as well as the ED inputs. For convenience, Quantifi Photonics offers cable assemblies to adapt all 1x8 outputs into individual 2.92 mm Male type RF connectors with skew-matching for all channels. For best performance and for all specifications referenced in the tables, the 1x8 Mini Coax to 2.92mm BERT-9007-1 assembly is recommended. The cable assemblies come in 1x8 assemblies with 2.92mm Male style on the user end, and an industry standard compact 1x8 rigidly held connector with >40GHz performance on the instrument front-panel end of the cable assemblies.
- 5. RMA Jitter specifications assume that test method uses a precision timebase equivalent-time sampling oscilloscope (example: Keysight 86100 with 86107A precision timebase, or Tektronix DSA8300 with 82A04 phase reference module. Samplers in this setup are assumed to have >40GHz bandwidth and reference clock fed into the precision timebase and/or phase reference module in setup is considered "jitter free" as a reference.

- Each channel of the PPG output and ED inputs have two complimentary 50ohm ac-coupled coaxial connections. Each channel's positive and negative outputs are independent 50-ohm coaxial transmission lines.
- 7. The PPG and ED outputs each use a compact 1x8 RF output of Mini Coax connectors. QP provides both 1x8 SMA and 1x8 2.92mm breakout cable assemblies designed to quickly plug into the front panel 1x8 connector buses with skew matching on the differential output. Details on these 1x8 breakout cables is provided at the end of the specification table in the Breakout Cable section, as well as being listed on the Ordering Information page. The instrument comes standard with two 1x8 2.92mm breakout individual Male type RF connectors, but the user is free to order replacement and/or additional breakout cables directly from Quantifi Photonics.
- 8. The data rates of any transmitter are determined by the Baud Rate and the type of signal format. The Baud Rate is the rate at which symbols are clocked into a system during a bit period (bit period = 1/(Baud Rate)), and in the case of Non-return to Zero format (NRZ) there are only two levels in each bit period which is the equivalent of one bit of information per bit period, therefore the data rate in bits-per-second for NRZ is equal to (Baud Rate in 1/s)'(1 bit). PAM4 is a data format which uses four levels in the data symbol for each bit period, therefore the data rate for PAM4 is (Baud Rate 1/s)'(2 bits). Example: a PAM4 type signal with a Baud Rate of 10.3125GBaud has a data rate of 20.625Gbits-per-second (often expressed as 20.625Gbps or 20.625Gb/s).

ORDERING INFORMATION

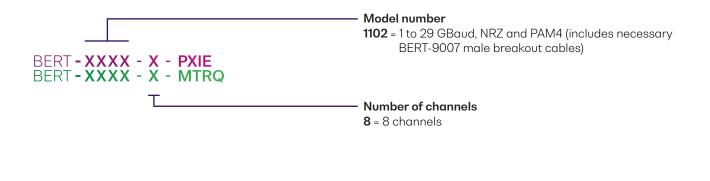

OPTIONAL EXTRAS

BERT - 9007 - 1 = Replacement 30cm 1x8 2.92mm male breakout cable for BERT-110X

BERT - 9008 - 1 = Replacement 60cm 1x8 2.92mm male breakout cable for BERT-110X

If your application requires different length cables than what you see listed here, please contact your Quantifi Photonics sales representative about alternative custom lengths cable assemblies.

WARRANTY INFORMATION

This product comes with a standard 1 year warranty.

With an **extended warranty and calibration plan** you'll spend more time focused on your priorities and less time worrying about maintenance.

Your choice: add a **3 or 5 year extended** warranty when you buy.



Guarantee performance

Ensure your equipment is operating at the best it can be for reliable and accurate results.

Lower cost of ownership

Lock in savings and maximise your testing budget with a lower base cost of ownership.

Peace of mind

Spend less time worrying about maintenance and more on generating results.

CALIBRATION PLANS FOR ADDITIONAL DISCOUNTS

Order a **calibration plan** when purchasing your Quantifi Photonics instruments and get additional discounts.

10% Discount

On calibrations ordered at the time of purchase.

25% Discount

Add on an extended warranty and receive a 25% discount on calibrations.

Over time and with regular use, all optical parts and connectors require re-calibration and maintenance to guarantee accurate and reliable performance. We recommend Quantifi Photonics optical instruments are re-calibrated every 12 months. With an instrument calibration performed by Quantifi Photonics technicians you receive:

- Comprehensive calibration to factory specifications
- End-to-end inspection to ensure all instrument functions are working and connectors are clean
- Firmware, software and documentation updates
- Certificate of calibration which includes detailed test results

How to do I secure my extended warranty or calibration plan?

Contact your Quantifi Photonics sales representative or email sales@quantifiphotonics.com

Extended warranties and calibration plans must be ordered at the time of purchase and are available only for Quantifi Photonics' products. The 25% calibration discount only applies to calibrations while the product is covered by the extended warranty period.

CATALOGUE

Our portfolio of optical & electro-optical test modules is rapidly expanding to meet a wide range of customer requirements and applications.

Tunable Laser Sources

Versatile telecom laser sources with full tunability across C or L bands. Narrow 100 kHz linewidth, up to 16.5 dBm of power, optional whisper mode to disable frequency dither.

Superluminescent Diode **Broadband Light Source**

Super-luminescent LED light source with high output power, large bandwidth and low spectral ripple and various wavelenaths.

Polarization Controller & Scrambler

High-speed automated polarization control with broad . wavelength coverage from 1260nm to 1650nm, low insertion loss and back reflection. Full remote control via intuitive GUI LabVIEW or SCPI.

Optical Spectrum Analyzer (OSA)

Low cost, spectral measurement in a compact module with built-in analysis for: SMSR, OSNR & spectral width. Targeted wavelengths for specific applications in O band, C band & L band.

Photonic Doppler Velocimeter (PDV)

Purpose-built module for Photonic Doppler Velocimetry (PDV). A circulator, two VOAs and a passive coupler all built into one compact module.



Highly customizable DFB or FP laser sources available in a wide range of wavelengths and powers. Models support SMF, MMF and PMF.

Optical-to-Electrical Converter

High bandwidth, broadband O-to-E converter. Available in a range of configurations; choose from 1 or 2 channels, AC or DC coupling and various conversion gain and operating wavelength ranges.

Optical Power Meters

Fast terminating or inline monitoring of optical signal power from -60 to +10 dBm across 750 – 1700 nm wavelengths. Model with logarithmic analog output for applications such as silicon photonics fiber alignment.

Passive Component Integration

Integrate passive optical components of your choice such as WDM couplers, splitters, band-pass filters, PM beamsplitters and circulators. Models support SMF, MMF and PMF.

Optical Switch

Proven reliability and fast switching time. Wide variety of switch onfigurations: 1x4, 1x16, 16x16 and more. Models support SMF, MMF and PMF.



Swept, Tunable Continuous Wave Laser

Swept, tunable continuous wave (CW) laser source with 0.01 dB power stability and 400 nm/s high-speed scan rate for R&D and production testing



Variable Optical Attenuator (VOA)

Fast attenuation speed with low insertion loss and built-in power monitoring. Operates in fixed attenuation or constant output power modes. Models support SMF, MMF and PMF connector types.



4 or 8-channel Pulse Pattern Generator and Error Detector at rates up to 29 Gbps for the design, characterization and production of optical transceivers and optoelectrical components.

	Po St
-	Pro



assive Component orage




otect and store your own passive fiber optic components such as splitters, connector adaptor patchcords, WDM couplers, and isolators in one handy module.







PXI - MODULAR SYSTEM









Test. Measure. Solve[™]

Quantifi Photonics is transforming the world of photonics test and measurement. Our portfolio of optical and electrical test instruments is rapidly expanding to meet the needs of engineers and scientists around the globe. From enabling ground-breaking experiments to driving highly efficient production testing, you'll find us working with customers to solve complex problems with experience and innovation.

To find out more, get in touch with us today.

General Enquiries Technical Support Phone - NZ Phone - USA sales@quantifiphotonics.com support@quantifiphotonics.com +64 9 478 4849 +1-800-803-8872



quantifiphotonics.com

Quantifi Photonics Ltd © 2023. All rights reserved. No part of this publication may be reproduced, adapted, or translated in any form or by any means without the prior permission from Quantifi Photonics Ltd. All specifications are subject to change without notice. Please contact Quantifi Photonics for the latest information.